

## **Installation Instructions**

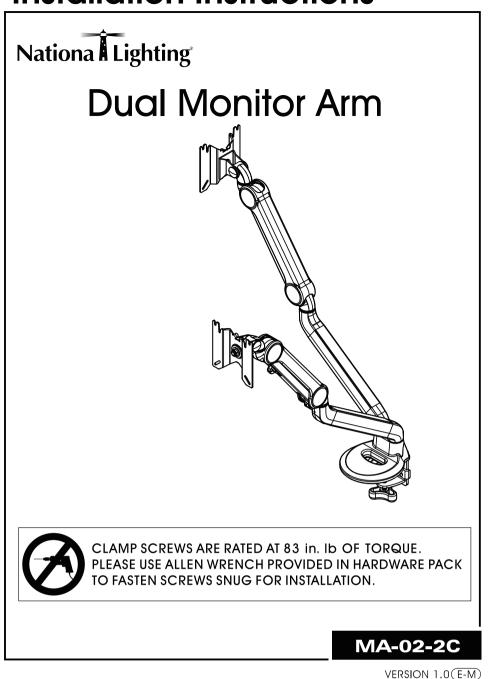

VERSION 1.0 E-M

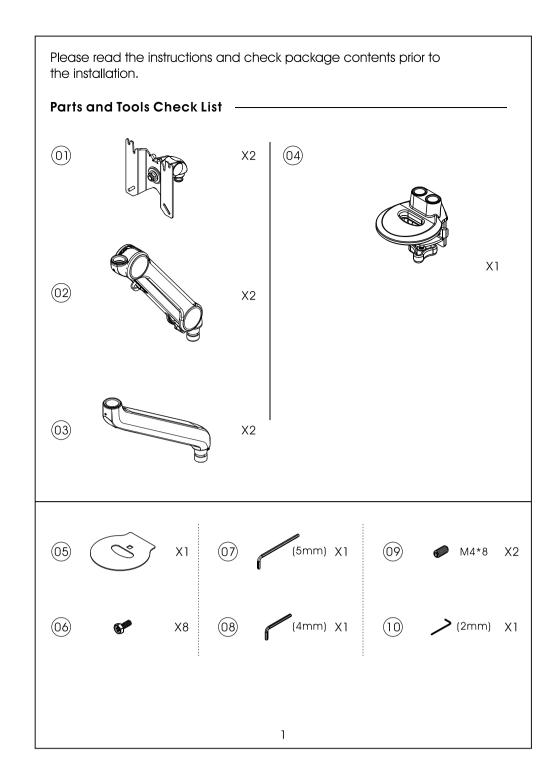


## Installation


## **Clamp Installation**

The monitor arm clamp fits worksurface thickness from 0.4" - 2.5" (10.2 -63.5mm). Please select one of the lower clamp positions based on the surface thickness.


Step 1

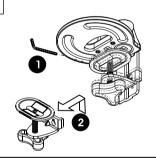

 - Temporary remove the lower clamp by loosening the bolts and slide the clamp out from the keyholes



 - Adhere the non-slip pad to the bottom
- Set the monitor arm base on the mounting surface



- Select the lower clamp position based on the thickness of worksurface (see below for measurements)
- Relocate the bolts when necessary
- Reattach the lower clamp to the base clamp
- Tighten the bolts

